


AC MANUAL GEN 2 OWNERS MANUAL

lift *tech* **Marine**
218-454-0682

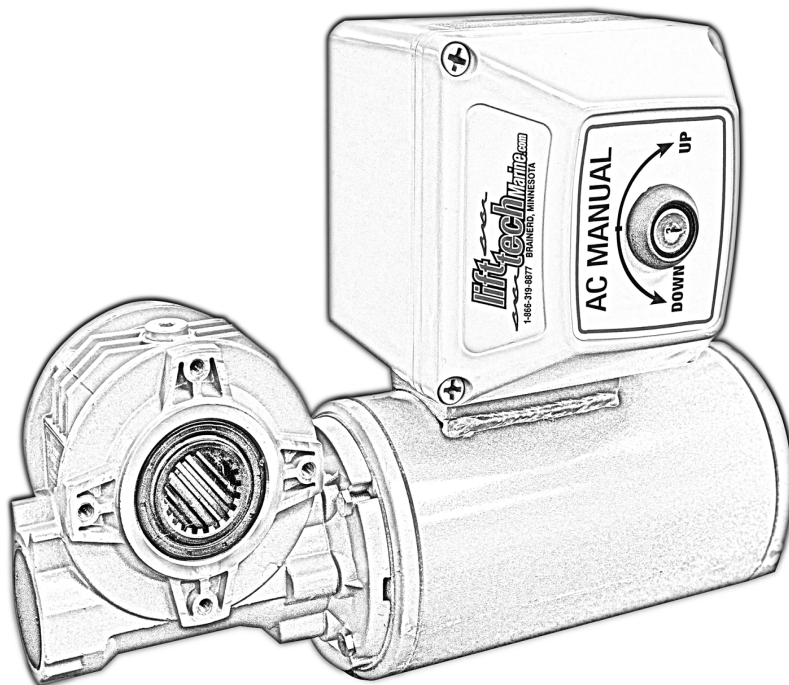

Operating the AC Motor:

When the lift is going “up” the gear head should be going clockwise. When the lift is going “down” the gear head should be going counterclockwise. If it’s the opposite direction this means your lift was let down too far and is backwound. To fix this, let the lift down, when it runs out of cable it will wind itself up correctly and start going up. If you have a remote control and the lift is going down while pressing up or going up while pressing down this is the reason why. Please follow the steps above to fix it.

Pendant:

We offer an optional 15-foot or 20-foot pendant that can be purchased and plugged directly into your motor. Pendant works without the key.

Off-Season Storage:

We recommend our storage cover for your motor if you are going to leave it sit outside during the winter months. Our storage cover will breath and let moisture out while your not using your motor.

Power Outage:

In case of a power outage, use the provided back up bit on the end of the shaft with your drill. Visit our website to watch a video on how to use the back up bit.

Power Requirements for AC:

All power used on your dock or lift needs to be GFI Protected at the shoreline.

Extension Cords must be 12/3 and under 150 feet. Circuit Breaker 20 AMPS GFI.

Always disconnect power when lift is left unattended to avoid lightning strikes and power surges.

Maintenance:

Our motors are self-lubricating and do not need any maintenance.

Website:

Go to www.lifttechmarine.com for more information, troubleshooting and how to videos.

We would like to take this opportunity to say thank you. We value you, as a customer. Should you ever have an issue please give us a call at 218-454-0682 or send us an email at customerservice@lifttechmarine.com





Warranty Card

***Must be filled out and sent to us within 60 days of purchase along with a copy of the original receipt for warranty to be valid.**

CIRCLE PRODUCT PURCHASED: AC IS PLUGGED IN TO EXTENSION CORD - DC IS BATTERY POWER.

AC-PWC KIT DC-PWC KIT AC-WHEEL DRIVE DC-WHEEL DRIVE
AC MANUAL DC MANUAL AC REMOTE DC REMOTE AC AUTOSTOP DC AUTOSTOP
WINCHBOX WITH MOTOR

SERIAL # LOCATED ON BACK OF MOTOR CYLINDER: _____

PURCHASED FROM: _____

NAME: _____

ADDRESS: _____

EMAIL: _____ PHONE: _____

LIFT TECH MARINE WARRANTS OUR MOTOR FROM DEFECTS IN MATERIALS AND WORKMANSHIP UNDER NORMAL USE FOR A PERIOD OF 2 YEARS FROM THE DATE OF PURCHASE. DURING THE WARRANTY PERIOD, LIFT TECH MARINE WILL REPAIR THE MOTOR IF DEFECTIVE. THE WARRANTY IS LIMITED TO THE PURCHASER AND IS NOT TRANSFERABLE. WARRANTY IS VOID IF THE PRODUCT IS MODIFIED OR ALTERED BY ANYONE OTHER THAN LIFT TECH MARINE, LLC.

*BLUE REMOTES HAVE A 1 YEAR WARRANTY AND DOESN'T INCLUDE BATTERIES.

***ALL WARRANTY CARDS MUST BE FILLED OUT WITHIN THE TIME FRAME AND HAVE A COPY OF THE ORIGINAL PURCHASE RECEIPT TO BE VALID.**

SEND THIS FORM AND YOUR RECEIPT TO :
CUSTOMERSERVICE@LIFTTECHMARINE.COM
OR MAIL TO:
LIFT TECH MARINE
7958 HASTINGS ROAD
BAXTER, MN 56425

RECOMMENDED HARD COVER



FIND MORE INFORMATION ONLINE AT WWW.LIFTTECHMARINE.COM